KLUŚ **Inspiring Solutions**

Parts needed to mount the KOZMA profile

| Extrusion (A) | LED strip (B) | Technical cover (C) | Cover (D) | End cap (E) |
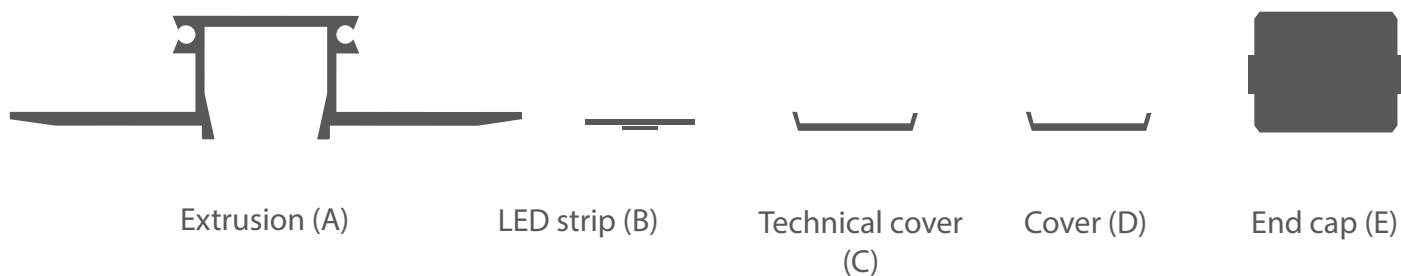
Tools needed for mounting:

- mounting glue

WARNING! All LED tapes should be connected to 12 V or 24 V power supplier, depending on the LED tape.

IMPORTANT: Instruction presensts most basic form of montage.
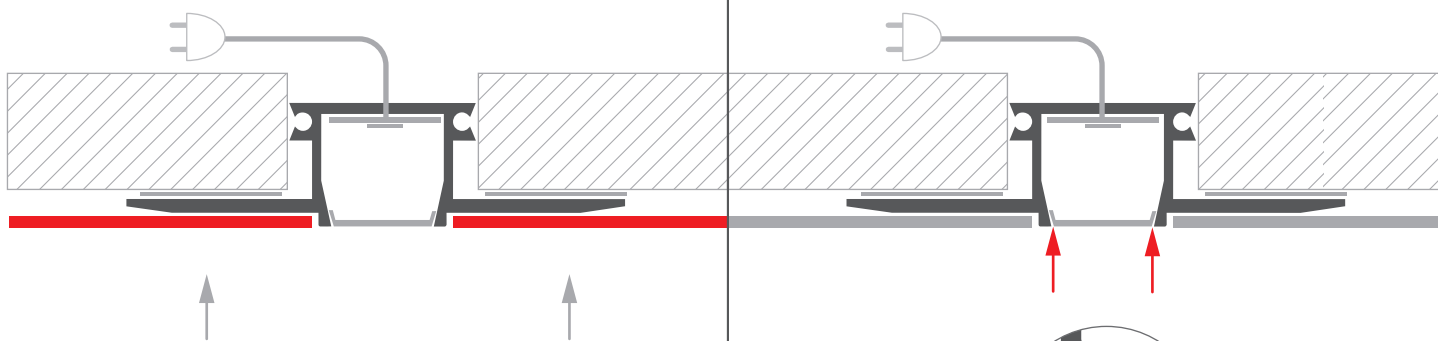For more information visit www.klusdesign.eu/uk

![KLUŚ Inspiring Solutions logo]

1. Mount the LED strip (B) in the extrusion, lead out the power cable, insert the technical cover (C) and then insert the end caps (E).
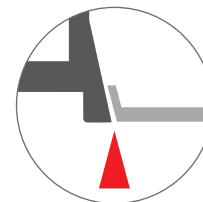
B

C

E
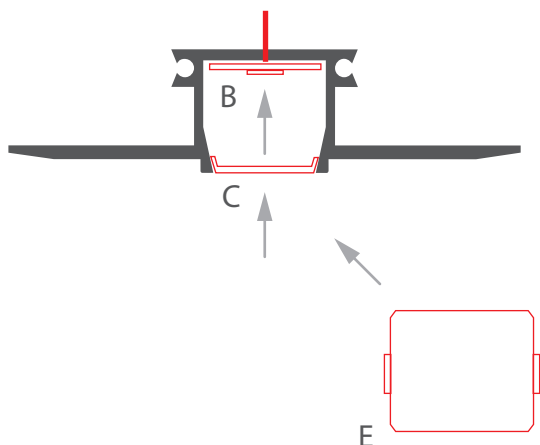
2. Attach the fixture (A) to the ceiling surface and connect the power cable.

A
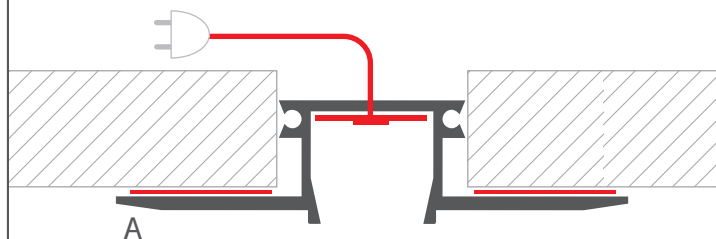
3. Apply a layer of plaster to the extrusion and the ceiling and then paint the surface.

4. Slide a sharp tool between the extrusion and the cover (on both sides of the cover) to cut off the layer of plaster and paint from the cover.

5. Remove the technical cover (C) and then insert the proper cover (D).

C   D