


Parts needed to mount the PUSZ-PRET-ZM fastener

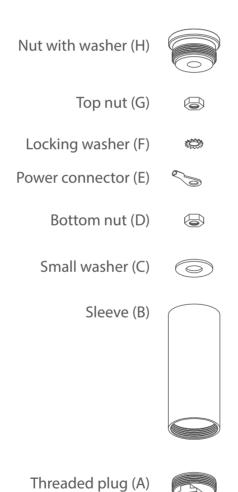


Tools needed for mounting:


- Allen wrench
- drill
- pliers

NOTE! A list of products corresponding with the selected accessories is available at www.klusdesign.eu/uk.




1. Drill holes with a diameter of 4mm to 8mm in the back of the extrusion. One hole per fastener.






5-6cm A +/-


3. Run the cable through the small washer (C) and put the sleeve (B) on the entire assembly. Tighten the sleeve on the arm with thread to stop the fastener from moving.



4. Attach the power connector (E) to the cable end.

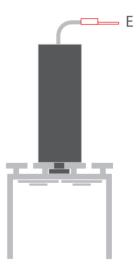

5. Bend the power connector (E) so that it fits into the sleeve (B). Put an arm with thread through the connector and secure it with nuts (D, G) and a locking washer (F).




6. Pull the nut (H) on from the top side of the arm.







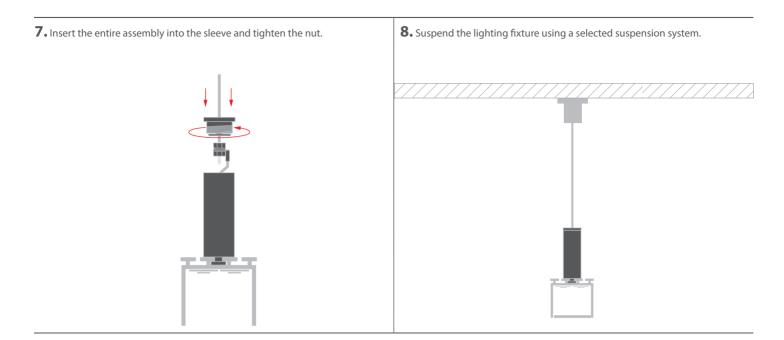

www.klusdesign.eu/uk 3